



iMac Intel 27" EMC 2546 iSight Camera and Microphone Cable Replacement

prerequisite for iSight camera and cable

Written By: Andrew Optimus Goldberg




Step 1 — iSight Camera and Microphone Cable



- Flip down the metal retaining bracket on the iSight camera cable.

Step 2

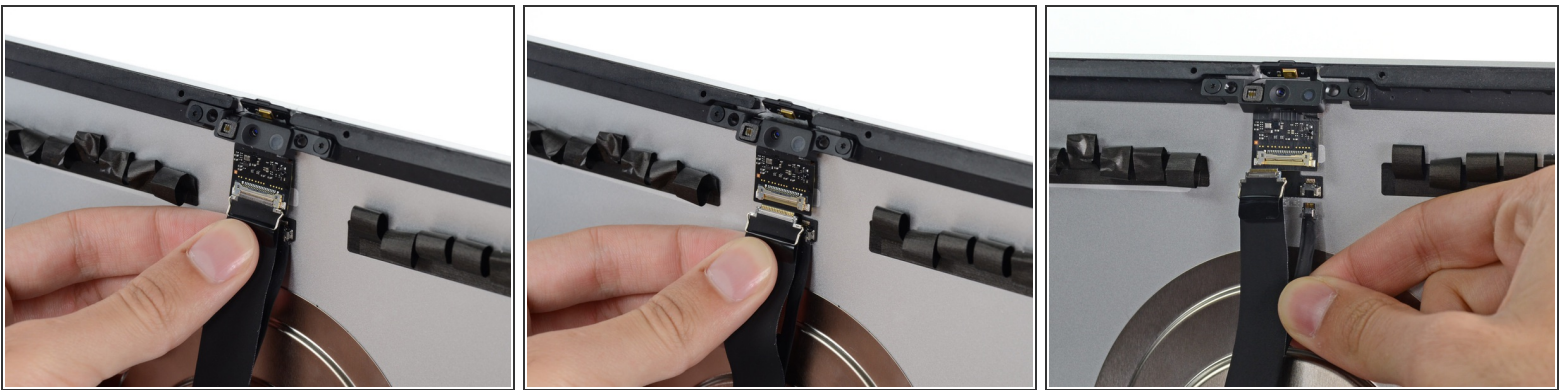

- Disconnect the iSight camera cable from its socket on the camera board.
 - ⓘ Be sure to remove only the iSight connector—the microphone connector is on a separate branch of the cable.
- Disconnect the microphone cable from its socket.
 - ⚠ These are delicate connections that can easily be broken. Be sure to pull the two connectors straight down out of their sockets.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 03:36:41 AM.